

READ ME FIRST!

Netra™ AX1105-500

This *READ ME FIRST!* document is written for the users of the Netra™ AX1105-500 board. The Netra™ AX1105-500 board is one of the latest members of the ATX form factor, PCI-based platform family at Sun Microsystems.

Powered by the 500MHz UltraSPARC IIe processor, the Netra™ AX1105-500 platform delivers high performance and superior connectivity in a low cost, full functionality motherboard. The Netra™ AX1105-500 board is an ideal platform for building server appliances, configured servers as well as for traditional embedded systems applications. This motherboard includes dual Ethernet connections to provide reliable redundant network connections, three industry standard PCI expansion slots for additional expandability, and a full complement of peripheral and device interfaces such as USB, serial, and parallel ports. The industry standard ATX form factor enables greater compute densities in thin servers, while simplifying integration and reducing costs. An optional Audio/Video Module is available with 8MB of video RAM that supports 24-bit color graphics and CD-quality 16-bit audio.

With support for the latest Solaris 8 Operating Environment, the Netra™ AX1105-500 platform delivers the reliability, performance, functionality, and flexibility required for today's cost-sensitive server appliance and embedded market.

Product Highlights

- 500MHz UltraSPARC IIe processor with internal 256KB four-way set associative integrated L2 cache
- Four standard 168-pin SDRAM DIMMs sockets - supports up to two gigabytes of SDRAM memory
- Two 10/100Base-T Ethernet interfaces allowing fast network connections
- Two serial ports and two independent USB ports support a wide range of peripheral devices
- ATA66 EIDE controller supports up to 4 EIDE devices
- Three 33MHz 32-bit PCI slots
- Personality Module expansion allowing a fourth PCI slot for custom designed boards



Checking the Contents of Your Netra™ AX1105-500 Shipment

Be sure to check the contents of your package against Table 1: Netra™ AX1105-500 Shipment Contents provided below (Also see Figure 1 for an illustration of the contents of the shipment). If any of the items are missing or damaged, contact your local sales representative.

Table 1: Netra™ AX1105-500 Shipment Contents

Description	Part #	Qty
Read Me First! Netra™ AX1105-500	806-7668-xx	1
ASSY, M/B, Netra™ AX1105-500, UltraSPARC IIe, 500MHz	375-0128-xx	1
AX1105 ATX rear I/O panel with cover plate	340-6905-xx	1
AX1105 riser card, 1U	370-4377-xx	1
AX1105 riser card support bracket with push pins	330-3222-xx	1
CD0 package which contains the following: <ul style="list-style-type: none"> • CD0 for Solaris 8, Update 3, P/N 704-7617-xx • CD0 for Solaris 8 Update 2, P/N 704-7610-xx • <i>Installing Solaris 8 10/00 or Solaris 8 1/01 Software</i>, P/N 806-7793-xx 	798-3653-xx	1



Related Documentation

- *Netra™ AX1105-500 Technical Reference and Installation Manual* (P/N 806-5997-xx)
- *Read Me First! Audio/Video Module for the Netra™ AX1105-500 Motherboard* (P/N 806-7669-xx)

These documents can be viewed at the following web site:

<http://www.sun.com/microelectronics/ax1105/>

Urgent Software Installation Note

The generic Solaris 8 01/01 version has a bug that can possibly cause data corruption. A special installation CD (P/N 704-7617-xx) is provided that **MUST** be used along with the Solaris Update. That update is also known as Solaris 8, Update 3 CD0. Do not use CD0 with Solaris 8, Update 2 (P/N 704-7610-xx). Refer to *Installing Solaris 8 10/00 or Solaris 8 1/01 Software* document (P/N 806-7793-xx, included with CD0) on how to install from CD0. If you do not have CD0, please contact your Field Application Engineer.

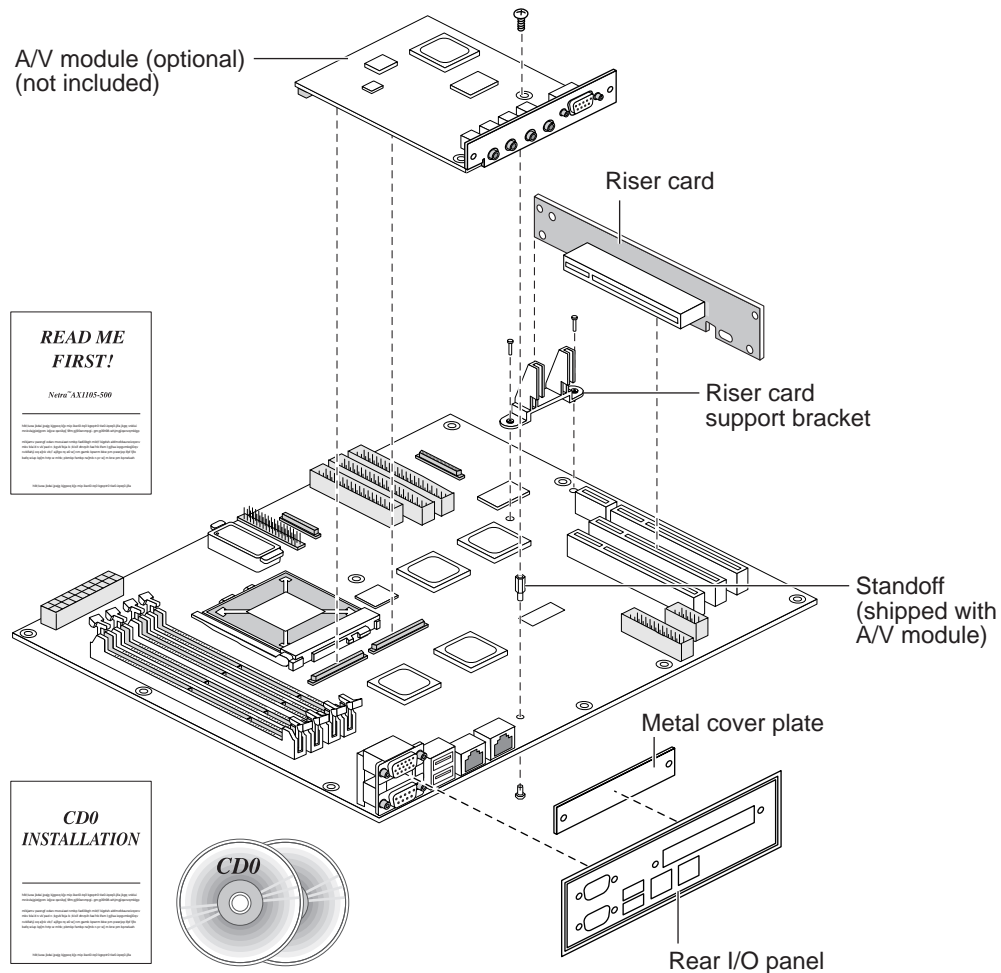


Figure 1: Netra™ AX1105-500 Board Package with Optional Audio/Video Module



Safety Considerations

Follow these guidelines to avoid injury to yourself or damage to the equipment:

- The board installation procedure should be performed only by qualified technicians.
- Turn off the main AC power switch and disconnect the system power cord from the AC source before installing or removing the Netra™ AX1105-500 motherboard from the chassis or enclosure.

Read these safety statements carefully before you install or remove any part of the system.



Caution – Installation of this product requires specific training and technical knowledge. These instructions have been provided for use by qualified personnel. This equipment uses electrical power internally that is hazardous if the equipment is improperly assembled or disassembled. Before you begin to install or remove this board or any other components, make sure the system power is turned off and the system power cord is disconnected from the AC source. Failure to comply may result in damage to the equipment or physical injury.

Follow these ESD (electrostatic discharge) preventive measures:

- Keep the board in the antistatic bag until it is needed.
- Attach a ground strap to your wrist when connecting or disconnecting boards or peripherals and the other end to the surface that is properly grounded.
- Remove a board from its antistatic bag only when you are properly grounded.

Place the board only on an antistatic mat. Do not place the board on top of an antistatic bag unless the outside of the bag also has an antistatic protection.

Software Information

Note – The generic Solaris 8 01/01 version has a bug that can possibly cause data corruption. A special installation CD (P/N 704-7617-xx) is provided that **MUST** be used along with Solaris Update. That update is also known as Solaris 8, Update 3 CD0. Do not use CD0 with Solaris 8, Update 2 (P/N 704-7610-xx). Refer to *Installing Solaris 8 10/00 or Solaris 8 1/01 Software* document (P/N 806-7793-xx) included with CD0 that describes how to install from CD0. If you do not have CD0, please contact your Field Application Engineer.

The Netra™ AX1105-500 requires the following software:

- Solaris™ 8 01/01 package or subsequent compatible version. Refer to the installation instructions provided with the software package.
- The latest OpenBoot™ PROM (OBP) compatible with your Solaris operating environment. The board is shipped with the version of OBP available at the time of manufacture (version 4.0.1). The OBP might be out of date by the time you get this board. Please check the following Sun web site for information on the latest OBP for your operating environment.

<http://www.sun.com/microelectronics/ax1105/details.html>

If you cannot access the Sun web site, contact your Field Application Engineer or your local Sun distributor to obtain the latest OBP.

Determining OBP Version

Via OBP

To determine the installed OBP version, enter the following command at the `ok` prompt.

```
.version
```

The system displays something like the following:

```
ok .version
Firmware CORE Release 1.0.1 created 2001/1/23 10:8
Release 4.0 Version 1 created 2001/01/23 10:31 <---- OBP version level
cPOST version 1.0.0 created 2001/1/4
CORE 1.0.1 2001/01/23 10:08
```

Via Solaris Operating Environment

Perform the procedure below at the shell prompt:

```
/usr/sbin/prtconf -V
```

The system displays:

```
OBP 4.0.1 2001/1/23 10:31
```

Checking the Solaris Operating Environment Version

At the Solaris prompt enter the following command:

```
showrev
```

You will see something similar to this:

```
Hostname: xxxx
```

```
Hostid: xxxx
```

```
Release: 5.8
```

```
Kernel Architecture: sun4u
```

```
Application Architecture: sparc
```

```
Hardware provider: Sun_Microsystems
```

```
Domain:
```

```
Kernel version: SunOS 5.8 Generic 108528-5 January 2001
```

Please note, xxxx are don't care since they are system specific.

Hardware Information

Following is some important hardware information about the Netra™ AX1105-500 board.

CPU

The CPU is an integral part of the Netra™ AX1105-500 board. Any attempt to remove the CPU from the board will void the board warranty.

Memory

The Netra™ AX1105-500 supports PC133 registered SDRAM DIMMs.

The Netra™ AX1105-500 does **not** support:

- PC100 type memory
- Unbuffered memory

Sun has a list of approved memory vendors and manufacturers for the memory. Please check our web site at:

<http://www.sun.com/microelectronics/ax1105/thirdparty.html>

Floppy Drive Cable

For floppy drive use the straight through cable.

Hard Disk Drive/CD-ROM Drives and Cables

Use ATA66 hard drives and up. For hard disks and CD-ROM drives use ATA66 cables. Do not use ATA33 cables.

Sun has a list of approved vendors and manufacturers for hard disk drives and CD-ROM drives. Please check our web site at:

<http://www.sun.com/microelectronics/ax1105/thirdparty.html>

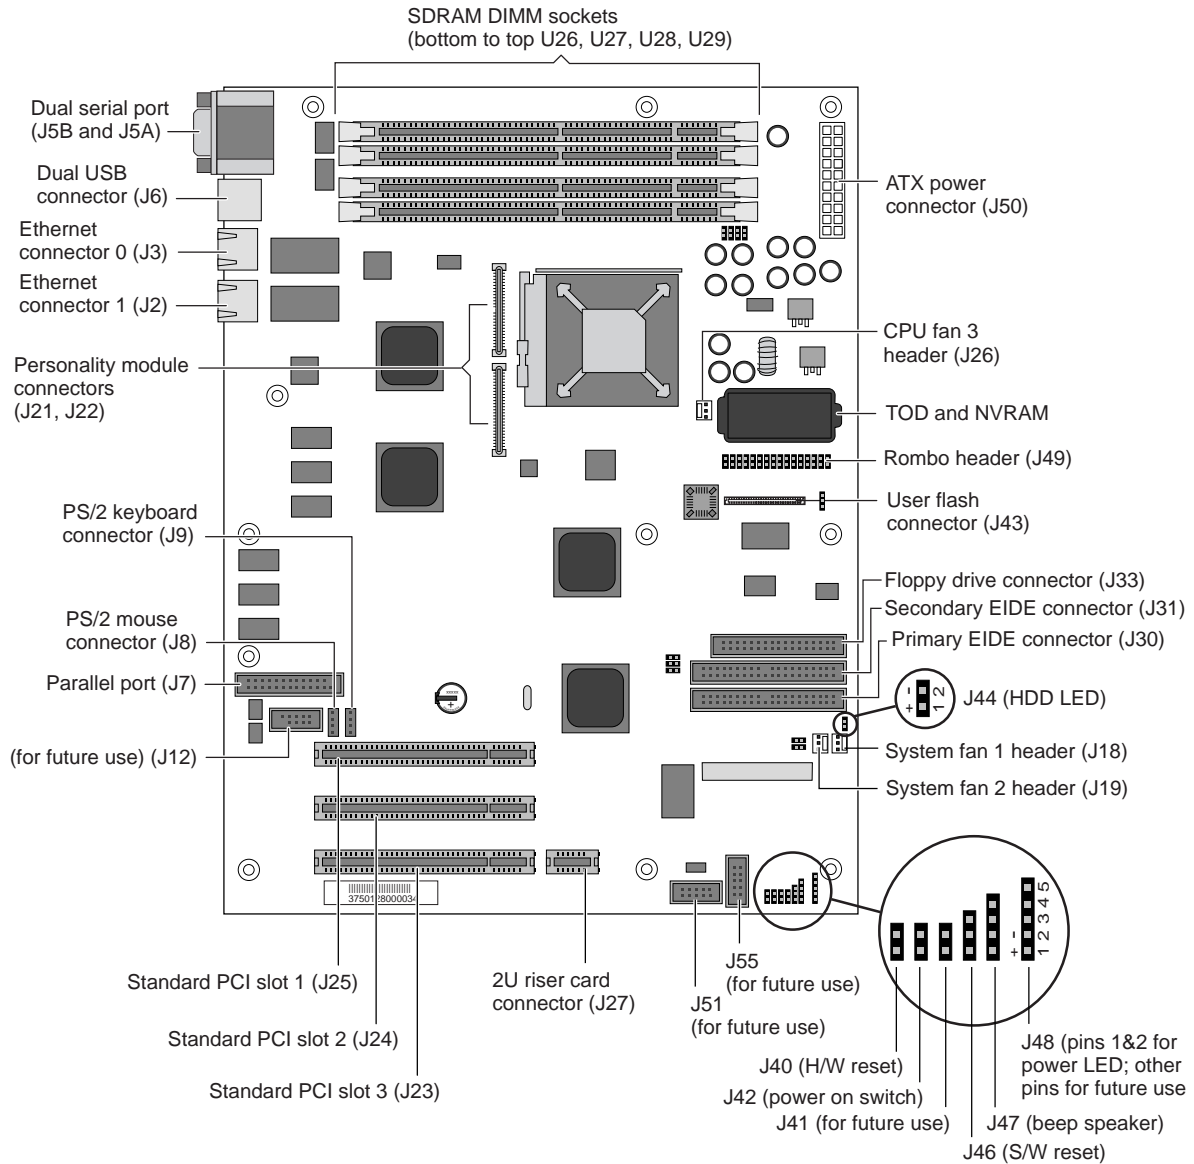


Figure 2: Netra™ AX1105-500 Board Headers and Connectors

Jumper Setting

Figure 3 shows the jumper settings on the Netra™ AX1105-500.



Caution – Use all safety and ESD precautions when installing the jumpers and other components on the Netra™ AX1105-500. Failure to comply may result in physical injury and damage to the equipment.

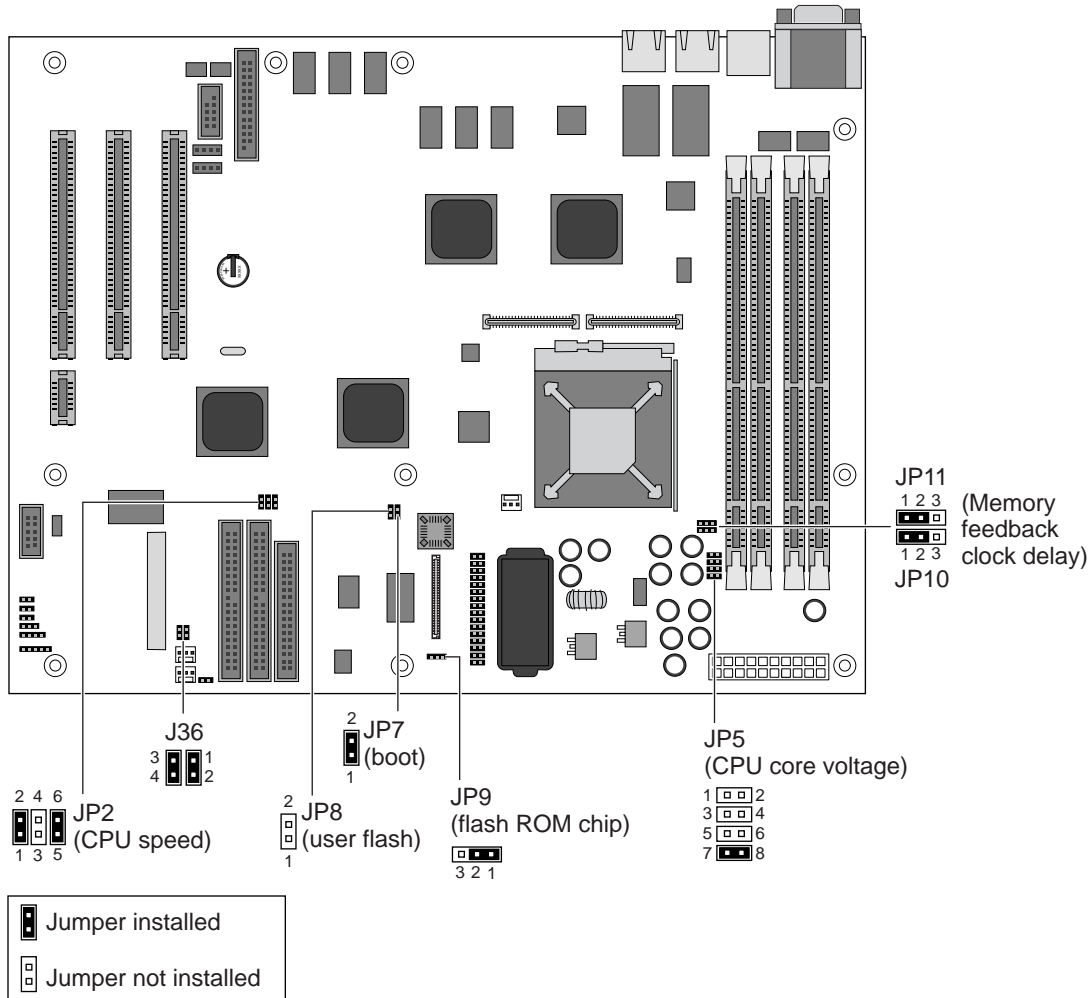

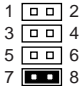

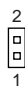
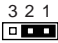
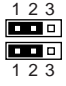



Figure 3: Netra™ AX1105-500 Default Jumper Setting

Table 2 describes the default jumper settings on the Netra™ AX1105-500 board.

Table 2: Netra™ AX1105-500 Default Jumper Setting

Jumper No.	Description	Default Setting	Comments
JP2	CPU speed detect		Jumper installed on pins 1 & 2 and 5 & 6 for 500MHz CPU speed. Do not change these jumper settings.
JP5	CPU core voltage		Jumper installed on pins 7 & 8 for the 1.7V CPU Vcore. Do not change these jumper settings.
JP7	User flash module memory size option		This is 'don't care' unless user flash is installed. Refer to the Netra™ AX1105 Technical Reference and Installation Manual (P/N 806-5997-xx) for details.
JP8	Flash chip select		No jumper installed. Boots from on board flash (OBP). Refer to the Netra™ AX1105-500 Technical Reference and Installation Manual (P/N 806-5997-xx) for details.
JP9	External ROM emulator selection		Jumper installed on pins 1 & 2. Boots from on-board PROM
JP10 & JP11	Memory feedback clock delay		This is the manufacturing default setting. Do not change or remove these jumpers.
J36	I2C bus jumper		For future use. Jumper installed on pins 1 & 2 and pins 3 & 4. Do not remove or change these jumpers.

Identifying Date & Serial Numbers on the Netra™ AX1105-500

The Netra™ AX1105-500 board revision number, part number, serial number, and date code are identified on three labels. The last six digits of the serial number are unique for each board and are shown as xxxxxx in this document. See Figure 4 for the location of identification labels on the Netra™ AX1105-500. Before you call Technical Support, get the following information from the board:

- Part number
- Serial number
- Revision no.
- Date code (for example, 02/2001 for the second week of 2001)

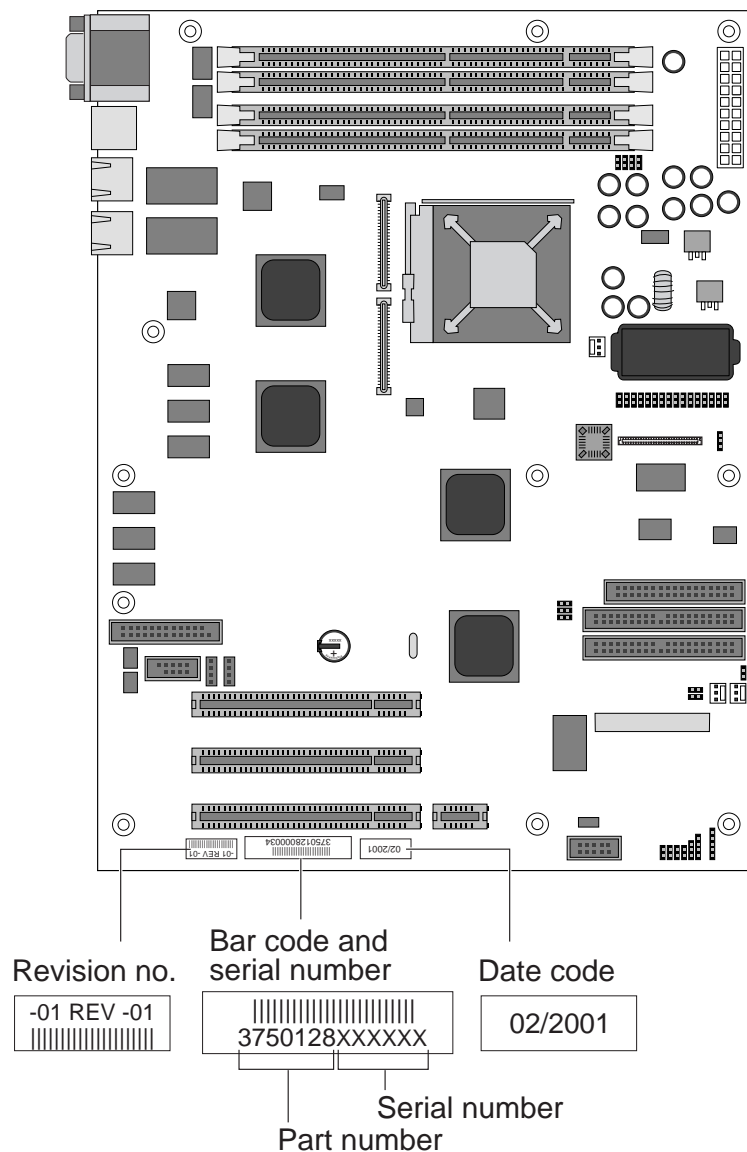


Figure 4: Netra™ AX1105-500 Board Identification Labels

Technical Support



If you have any technical questions or issues that are not addressed in the Netra™ AX1105-500 documentation set or on the web site, contact your local Sun Enterprise Services.

For customers in the US or Canada, please call 1-800-USA-4SUN (1-800-872-4786).

For customers in the rest of the world, find the World Wide Solution Center nearest you by visiting our web site:

<http://www.sun.com/service/contacting/solution.html>

When you call Enterprise Services, be sure to indicate that the Netra™ AX1105-500 was purchased separately and is not associated with a system. Identify the product by its part number. For example,

- Netra™ AX1105-500 board assembly 3750128xxxxxx

Before Returning Your Board to Enterprise Services

You **MUST** get Return Material Authorization (RMA) numbers from Enterprise Services for each part you intend to return.

If Enterprise Services asks for a system serial number, **BE SURE TO INDICATE THAT THE board WAS purchased separately and IS not associated with a system. Identify the product by its name and part number. For example:**

- Netra™ AX1105-500 board assembly 3750128xxxxxx

Enterprise Services will give you specific details on the return procedure for your geographic area. In addition, follow these guidelines in packaging the hardware and addressing the packaging.

Take the electrostatic discharge (ESD) precautions while handling the board:

- Handle the board only by the nonconducting edges.
- Do not touch the components or any metal parts.
- Always wear a grounding wrist strap when handling the board.
- Be sure the wrist strap is connected to ground (Earth).
- Please use the original or equivalent packaging material to return the failed part.
- Make sure the RMA number is on the box containing that part.
 - The outermost box needs to have the RMA number and the part number of its primary contents and the following:
 - Destination address
 - Source address
 - For international shipments, Enterprise Services shipping number to expedite handling in customs.
- Remove and retain the memory modules (DIMMs).
- Remove and retain the TOD/NVRAM chip.
- Remove and retain A/V module if applicable

The TOD/NVRAM chip holds specific network address data. It may also hold configuration data specific to your installation. Be sure to keep a copy of this information. You **MUST** remove this module before you return the board to Enterprise Services. The replacement Netra™ AX1105-500 will not have a TOD/NVRAM module. You must reinstall your retained module.

Figure 5 shows how to remove the NVRAM from the Netra™ AX1105-500 NVRAM Socket.

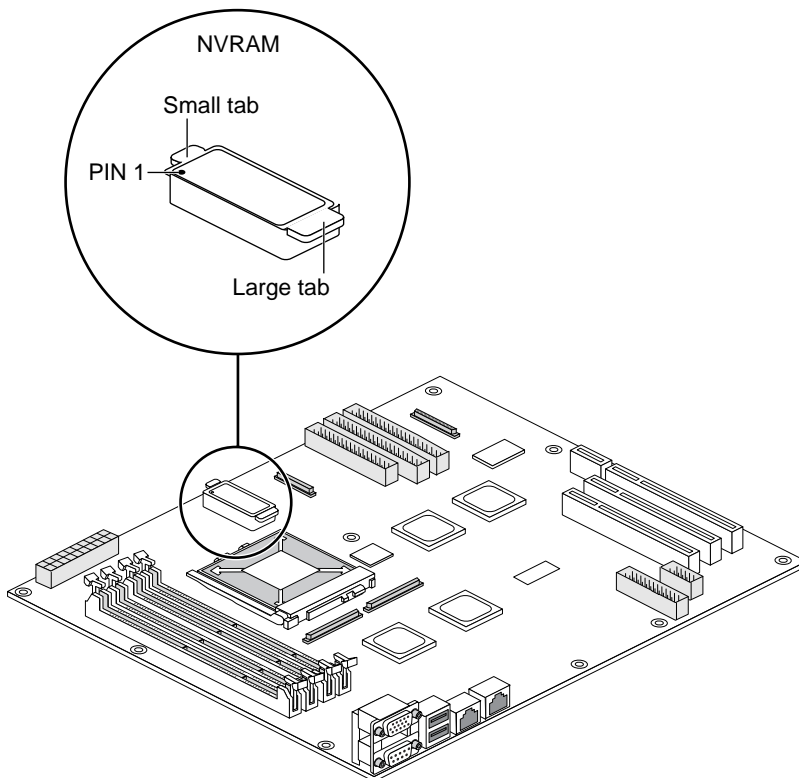


Figure 5: Removing the NVRAM from the Netra™ AX1105-500 NVRAM Socket

©2001 Sun Microsystems, Inc. All rights reserved.

THE INFORMATION CONTAINED IN THIS DOCUMENT IS PROVIDED “AS IS” WITHOUT ANY EXPRESS REPRESENTATIONS OF WARRANTIES. IN ADDITION, SUN MICROSYSTEMS, INC. DISCLAIMS ALL IMPLIED REPRESENTATIONS AND WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

This document contains proprietary information of Sun Microsystems, Inc. or under license from third parties. No part of this document may be reproduced in any form or by any means or transferred to any third party without the prior written consent of Sun Microsystems, Inc.

Sun, Sun Microsystems, the Sun Logo, Solaris, Sun Enterprise, Netra, and OpenBoot are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the United States and other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

UNIX is a registered trademark in the United States and other countries, exclusively licensed through X/Open Company, Ltd.

The information contained in this document is not designed or intended for use in on-line control of aircraft, aircraft navigation or aircraft communications; or in the design, construction, operation or maintenance of any nuclear facility. Sun disclaims any express or implied warranty of fitness for such uses.

RESTRICTED RIGHTS: Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95) and DFAR 227.7202-3(a).

DOCUMENTATION IS PROVIDED “AS IS” AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.