


Rosemount 333 HART[®] Tri-Loop[™]

HART-TO-ANALOG SIGNAL CONVERTER

- Convert a digital HART signal into three additional analog signals
- Easy to configure and install
- Accessory product for multivariable instruments
- Available as either High-alarm or Low-alarm device

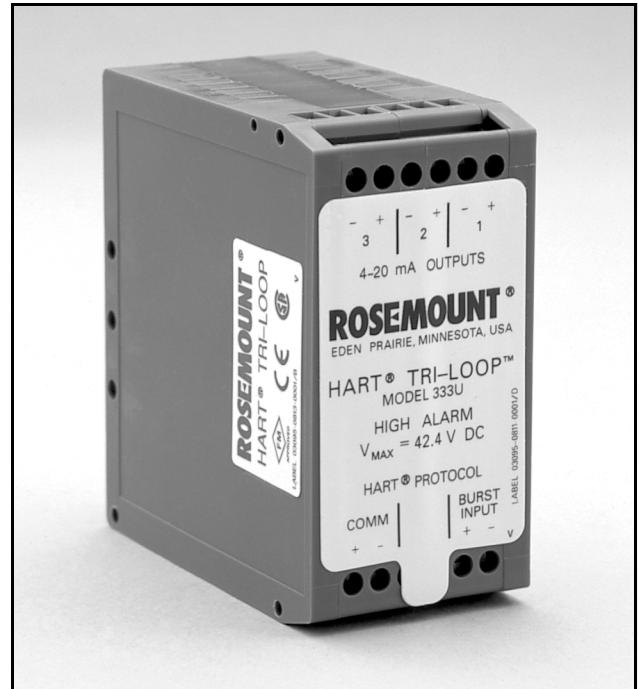

Contents

Ordering Information	page 3
Specifications	page 3
Dimensional Drawings.....	page 5

HART Tri-Loop HART-to-Analog Signal Converter

Convert a digital HART signal into three analog signals

Convert a multivariable digital HART signal into independent 4-20 mA analog process variables using the Rosemount 333 HART Tri-Loop. Apply in control or monitoring applications to obtain up to three additional analog outputs without additional process penetrations.

Accessory product for multivariable instruments

For use with the Rosemount 3051S MultiVariable™, 3051S Advanced HART Diagnostics, and 3144P products. When used with the 3051S MultiVariable transmitter, the 333 HART Tri-Loop allows possible outputs of Differential, Absolute or Gage pressure, Process Temperature, Mass or Volumetric Flow, Energy Flow, Totalized Flow, and Sensor Module Temperature. When used with the 3051S Advanced HART Diagnostics, possible outputs include Pressure, Sensor Module Temperature, Scaled Variable, Standard Deviation, and Mean. When used with the Rosemount 3144P, possible outputs include Sensor 1, Sensor 2, Differential and Transmitter Terminal Temperature.


Easy to configure and install

The 333 HART Tri-Loop is easy to configure and maintain using the 475 Field Communicator. AMS Device Manager provides easy PC-based user configuration. Installation is quick and easy with three DIN rail mount options and electrically isolated analog output channels for flexible grounding.

Available as either High-alarm or Low-alarm device

Tri-Loop alarm channels are factory configured. All channels alarm if the attached device indicates a sensor failure or transmitter malfunction.

Figure 1. Example Tri-Loop Installation with Rosemount 3051S MultiVariable Transmitter

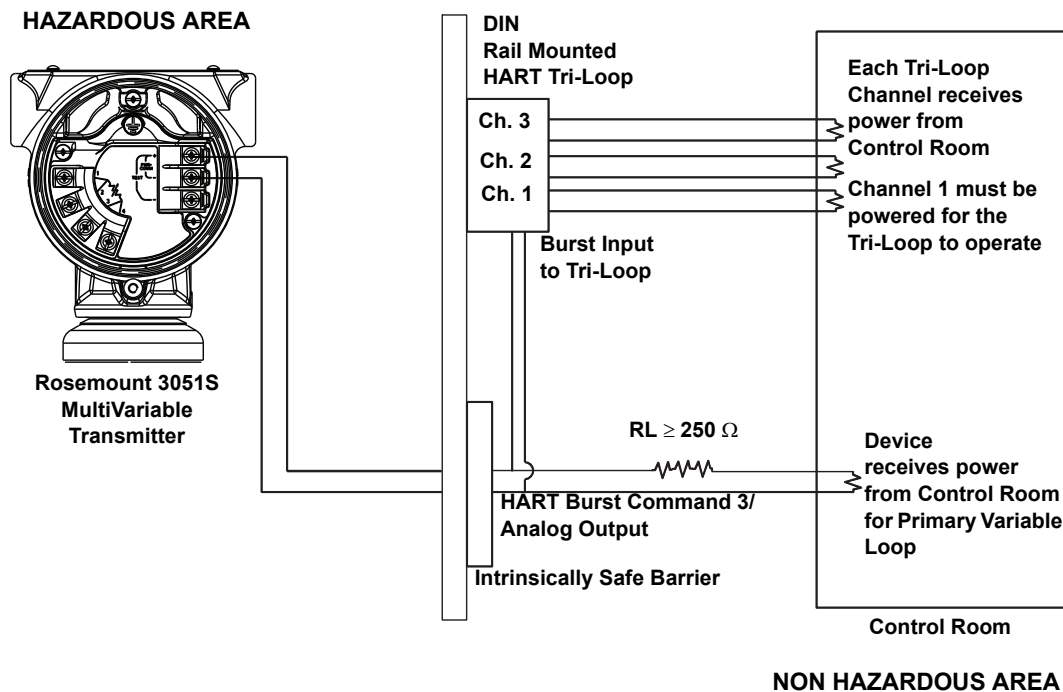

Ordering Information

Table 1. Rosemount 333 HART Tri-Loop

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery. The Expanded offering is subject to additional delivery lead time.

Model	Product Description	
333	HART Tri-Loop	
Alarm Option		
Standard		Standard
U	High Alarm	★
D	Low Alarm	★
Configuration Option		
Standard		Standard
C2	Custom Configuration (Configuration Data Sheet must be completed)	★
Typical Model Number: 333 U		

Specifications

FUNCTIONAL SPECIFICATIONS

Service

Accessory product for use with the 3051S MultiVariable Transmitter, 3051S Advanced HART Diagnostics Transmitter, 3144P Temperature Transmitter, or any other HART device with a burst mode output.

Output

One, two, or three 4–20 mA user-selectable output signals.

Device	Output Options
3051S MultiVariable	DP, AP, GP, PT, Mass or Volumetric, Energy Flow, Totalized Flow, and Sensor Module Temperature.
3051S	Pressure, Sensor Module Temperature, Scaled Variable, Standard Deviation, and Mean.
3144P	Sensor 1, Sensor 2, Differential Temperature, or Transmitter Terminal Temperature.

Power Supply

External power supply required for each channel. Each channel operates on terminal voltage of 11–42.4 Vdc.


NOTE

Channel 1 must be powered for Tri-Loop operation.

Load Limitations

Loop resistance is determined by the voltage level of the external power supply, as described below:

$$\text{Max. Loop Resistance} = \frac{\text{Power Supply Voltage} - 11}{0.022}$$

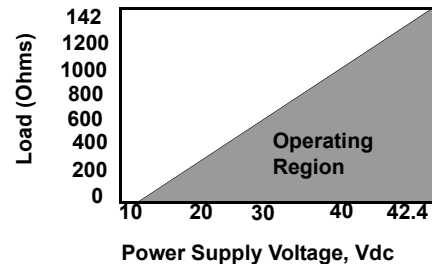

Turn-on Time

Analog signals will be within specifications five seconds after power is applied to Tri-Loop.

Installation Locations

Approved for FM ordinary locations, approved for CSA ordinary locations

Temperature Limits

Ambient

50 to 104 °F (10 to 40 °C)

Storage

–40 to 158 °F (–40 to 70 °C)

Humidity Limits

0–95% non-condensing relative humidity.

Failure Mode Alarm

If Tri-Loop diagnostics detect a Tri-Loop failure or the transmitter indicates a transmitter malfunction, the analog signal for all channels will be driven either below 3.75 mA or above 21.75 mA to alert the user. The high or low alarm signal is determined by the Tri-Loop Model Number, see “Alarm Configuration” on page 4.

PERFORMANCE SPECIFICATIONS

(Performance specifications are for the HART Tri-Loop only.)

Reference Accuracy

±0.045% of span

Ambient Temperature Effect per 50 °F (28 °C)

±0.15% of span

Stability

±0.1% of span for 12 months

Analog Output Update

Tri-Loop responds to every HART burst update (Typical transmitter burst update rate: 0.3 to 0.5 s.)

Tri-Loop Response Time (after each burst update)

Channel 1:120 ms; Channel 2:220 ms; Channel 3:320 ms

Total Response Time

Typical response time from sensor change to transmitter to

Tri-Loop analog update: 0.7 to 1.0 seconds.

Electromagnetic Compatibility (EMC)

Meets all relevant requirements of EN 61326-1:2006

- ESD tested to 4 kV contact and 4 kV air
- EM field immunity from 80 MHz to 1 GHz tested to 3 V/m
- Limits of performance criterion A defined as $< \pm 0.1\%$ of span

PHYSICAL SPECIFICATIONS

Electrical Connections

Screw clamps. Accepts 24–12 AWG solid or stranded wire.

Dimensions

1.57 × 3.11 × 3.36 in. (40 × 79 × 85,5 mm)

DIN Rail Mounting Options

Asymmetrical 32 mm G rail, symmetrical 35 × 7.5 mm top hat rail, or symmetrical 35 × 15 mm top hat rail (see Tri-Loop Dimensions on page 5).

Weight

0.27 lb (0,1 2 kg)

Alarm Configuration

Tri-Loops are configured with all channels to alarm in the same direction. Alarm direction is configured at the factory, and cannot be changed in the field. In addition, all channels alarm if the attached device indicates a sensor failure or transmitter malfunction. Tri-Loops are ordered according to the desired alarm direction.

Standard Configuration

Unless otherwise specified with a C2 option, Tri-Loop is shipped as described in Table 2.

Tri-Loop Label

Each Tri-Loop is labeled with serial number, part number, and factory configuration.

Custom Configuration

If a Tri-Loop is ordered with a C2 option for custom configuration, the assigned variable, variable range, variable units, and channel status are assigned for all three channels.


333 HART Tri-Loop Configuration

The 333 HART Tri-Loop can be fully configured using the 475 Field Communicator. AMS Device Manager software provides a PC-based user configuration.


Table 2. Standard Configuration

Tri-Loop Channel	Assigned Variable	Variable Range	Variable Units	Channel Status
Channel 1	Second	0–250	inH ₂ O at 68 °F	Disabled
Channel 2	Third	0–800	psi	Disabled
Channel 3	Fourth	–40 to 400	Degree F	Disabled

Figure 2. DIN Rail Mounting Options

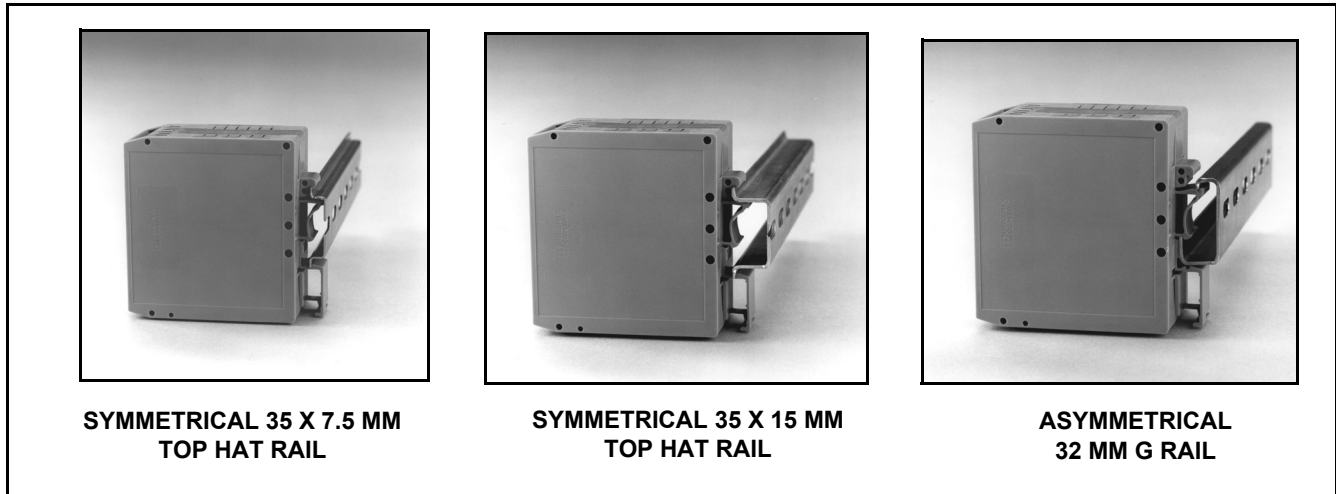

Dimensional Drawings

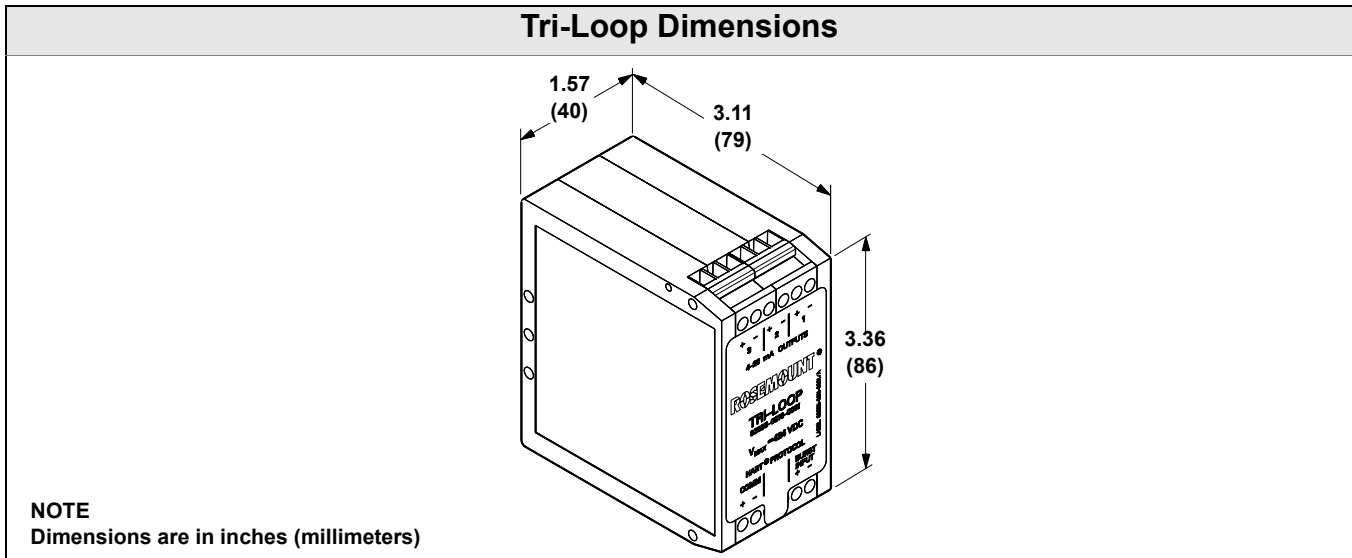

*Standard Terms and Conditions of Sale can be found at www.rosemount.com/terms_of_sale
The Emerson logo is a trade mark and service mark of Emerson Electric Co.
Rosemount and the Rosemount logotype are registered trademarks of Rosemount Inc.
Tri-Loop and MultiVariable are trademarks of Rosemount Inc.
HART is a registered trademark of the HART Communication Foundation.
All other marks are the property of their respective owners.*

Emerson Process Management

**Emerson Process Management
Rosemount Measurement**
8200 Market Boulevard
Chanhassen MN 55317 USA
Tel (USA) 1 800 999 9307
Tel (International) +1 952 906 8888
Fax +1 952 949 7001

Emerson Process Management
Blegistrasse 23
P.O. Box 1046
CH 6341 Baar
Switzerland
Tel +41 (0) 41 768 6111
Fax +41 (0) 41 768 6300

Emerson FZE
P.O. Box 17033
Jebel Ali Free Zone
Dubai UAE
Tel +971 4 811 8100
Fax +971 4 886 5465

**Emerson Process Management Asia Pacific
Pte Ltd**
1 Pandan Crescent
Singapore 128461
Tel +65 6777 8211
Fax +65 6777 0947
Service Support Hotline : +65 6770 8711
Email : Enquiries@AP.EmersonProcess.com